


## Accessories

**Bellow FB** | Add-on component for translating and rotating version

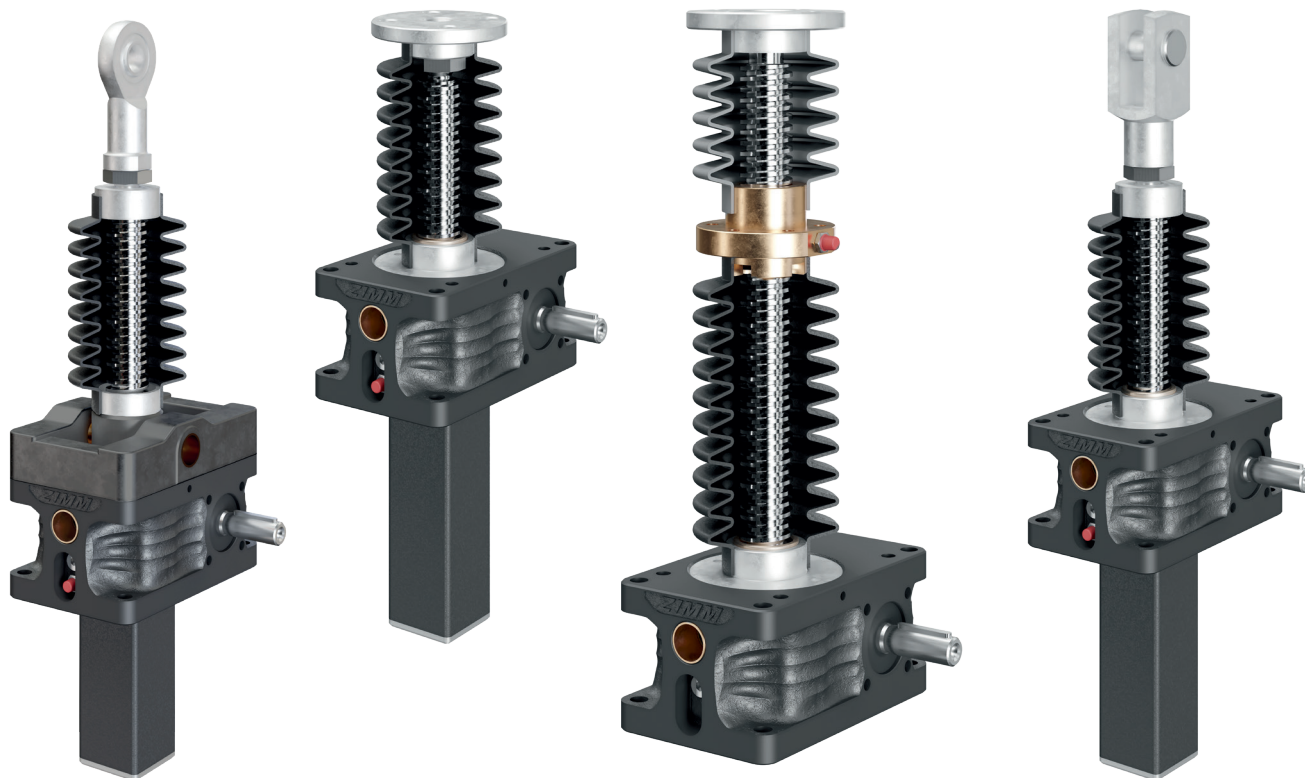

### The bellows protect the screw and lubricant against dirt and moisture

For optimum conditions use in conjunction with a bellow.

#### PLEASE NOTE:

The bellows must not be compressed to less than the ZD dimension nor extended beyond the AZ dimension. If the stroke is longer than 1000 mm, fit a bellows with an extension block. Take into consideration that when the bellows are fitted horizontally they must not touch the screw.

#### Risk of destruction!

This is prevented by using bellows with bushings. A special installation to protect the spindle and bellows is required from: Concrete dust, grinding dust from angle grinders, welding spatter, etc. protect the bellows also from direct sunlight. The maximum operating cycle of the lifting gear can be reduced by the heat-insulating effect of the bellows.